

Rated Capacity Limiter (RCL)

Table of contents

Introduction	4
System operation description	6
Main features	7
System description	8
Components location on the machine	9
System features	10
Panel description	11
Key function	13
Starting up	14
How to select the operating mode	14
How to select the operating mode	14
Configuration list	15
How to select the parts of line	17
Disabling the fastener upstroke limit switch	17
Releasing the boom upstroke limit switch lock	17
Panel visualizations	18
How to select the limit	20
Diagnostic	22
Troubleshooting	22
Auto-diagnostic	24
System internal working conditions monitoring	24
Disabling the rated capacity limiter	27
Warnings	29

Introduction

The information on this document could be subject to change without notice.

The constructor is not responsible for possible content mistakes or misprints that could be present in this manual.

Any reproduction, translation or copy of parts of this manual is forbidden without prior written authorization by The constructor.



WARNINGS

The rated capacity limiter, is an electronic control device, designed to help the operator in the safe use of the machine, warning him by means of visual and audible alarms when approaching a dangerous condition. However, this device won't replace the good experience of the operator in the proper use of the crane.

The responsibility of the operations in safety conditions of the machine is on operator care, as well as the fulfilment of all safety rules prescribed.

The operator must be able to recognize if the data transmitted by the system is correct and coherent with the real conditions.

He also must be able to utilize the data in order to operate in safe conditions.

The RCL is an electronic device with several components and could be subject to failures or defects.

The operator must recognize these events and must act consequently (to proceed to repair, if possible, or to call the constructor assistance).

Before starting the operations with the machine, user must fully read and understand this manual and follow the instructions written in it.

IMPORTANT NOTES

- The RCL is supplied with a key for automatic shut-off over-ride.
- In the normal working condition this key must be positioned properly not to operate the override functions.
- It is prohibited to use this key to lift loads exceeding the load table limits provided by the manufacturer of the crane.
- The key must be used only in extreme cases: malfunctioning or situations justifying its use.
- The use of the key is allowed only by authorized personal, who are responsible of its use.
- The RCL has a powerful FAIL-SAFE self-diagnostics program suitable to verify the good operation of its circuits and measuring transducers. In case of a failure is detected, the RCL puts itself in emergency status by blocking the manoeuvres.
- Nevertheless, the operator, before starting the operation of the machine, must secure that the RCL functions correctly. To do this, he must verify the accuracy of the displayed values by performing some tests. He must also verify that there are not messages or alarm indications, and verify the correct operation of shut down function.

- Generally, the RCL does not automatically change the operating conditions of the machine (tables). The operator is responsible for the proper setting of the operating conditions of the machine and the correct use of the rated capacity limiter.
- About this, follow the indications given forwards in the manual and concerning the operating modes. An incorrect setting of the tables can cause an incorrect operation of the RCL, will create a dangerous situation in the crane operating. For this reason it is essential to set the correct operating mode.
- These operating conditions generally vary when:
 - a) outriggers are extended or retracted
 - b) switching, the operation from outrigger mode to on tires mode
 - c) shifting from operation in static conditions to translation
 - d) telescopic mechanical extensions are extended or not
 - e) further equipment (jib, ext, etc.) are installed or not
 - f) the number of parts of line is properly selected.

In general, it is mandatory to follow the instructions given by the crane manufacturer.

System operation description

The Rated Capacity Limiter is designed to aid the operator in safe functions of the crane.

The RCL compares automatically the lifted load to the maximum one supplied by load table providing the necessary information to the user in order to work in safety condition.

The main readings are:

- actual lifted load
- maximum admitted load
- tilting percentage
- operating radius
- boom angle
- boom extension (length)
- working mode (Operating mode)
- warning lights (green, yellow, red) and audible alarm.

The system determines the lifted load by computing it from the relevant sensing devices signals (pressure or load cell), and by means of the measures of boom angle and extension operating radius is computed too.

The lifted load is continuously compared with the maximum allowable load obtained from the load tables.

Consequently three possible situations can occur:

- 1) Safety
green lamp is on, no presence of acoustic signal: lifted load is lower than 90% of the maximum load.
- 2) Warning
yellow lamp is on and audible alarm intermittently sounds; this is the warning situation. The signal occurs when the lifted load is more than 90% and less than 100% of maximum load.
- 3) Alarm
red lamp is on and audible alarm sound continuously inside the cab, another audible intermittent alarm sound outside the cab. The external alarm device is positioned on the lower part of the main boom. Lifted load exceeds the allowable load so that the control functions shut down is activated.

In the alarm situation, only control function operations to allow the machine in a safe working condition are enabled.

Main features

Working condition measuring



PRESSURE TRANSDUCERS
(lifted weight data)



LENGTH/ANGLE SENSOR
(Boom's geometrical data)

AUTOMATIC SELECTIONS
External
Micro-switches:
- Rotation
- A2B

Memorization of the load charts/ table and data computing

LTB1	Name	Code	Ballast	2.5	Outrigger	6.3	Outrigger	10	14	18	22	26	30	34	38	42	46	50
1	Lab00	0	24	48	73	93	100	100	100	100	100	100	100	100	100	100	100	100
2	I	0	24	48	73	93	100	100	100	100	100	100	100	100	100	100	100	100
3	II	0	24	48	73	93	100	100	100	100	100	100	100	100	100	100	100	100
4	III	0	24	48	73	93	100	100	100	100	100	100	100	100	100	100	100	100
5	IV	0	24	48	73	93	100	100	100	100	100	100	100	100	100	100	100	100
6																		
7																		
8	Amaz	79	32	79	19	79	17	79	14	79	10	79	9	79	9	79	9	79
9	Amaz	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
10																		
11	3	62.4	32	71.9	20	75.9	18	76	14	77.2	10	78.2	9	78.4	8.80	78.4	8.80	78.4
12	3.5	68.4	27.45	69.8	20.95	74.5	18.45	76	14	77.2	10	78.2	9	78.4	8.80	78.4	8.80	78.4
13	4	54.1	24.4	67.4	20.75	74.5	18.45	76	14	77.2	10	78.2	9	78.4	8.80	78.4	8.80	78.4
14	4.5	49.5	21.9	65.2	21.2	72.1	19.7	75.2	14.8	77.2	10	78.2	9	78.4	8.80	78.4	8.80	78.4
15	5	45	19.4	62.8	19.3	71.7	17.3	74.6	14.3	77.2	10	78.2	9	78.4	8.80	78.4	8.80	78.4
16	6	33.4	15.5	58	14.75	65.6	13.45	72.9	12.25	75.2	9.55	76.4	8.80	76.4	8.80	76.4	8.80	76.4
17	7	19.1	11.5	53	11.7	62.2	10.9	71.2	10.1	75.2	9.55	76.4	8.80	76.4	8.80	76.4	8.80	76.4
18	8			47.7	9.4	61.7	9.05	69.2	8.5	73.2	8.05	74.5	7.9	74.5	7.9	74.5	7.9	74.5
19	9			41.8	7.65	57.8	7.7	67.9	7.25	71.2	6.9	72.5	6.8	72.5	6.8	72.5	6.8	72.5
20	10			35	6.4	53.7	6.45	64.4	6.25	69	6	70.4	5.9	70.4	5.9	70.4	5.9	70.4
21	11			28.7	5.4	49.4	5.4	61.8	5.4	66.8	5.25	68.2	5.15	68.2	5.15	68.2	5.15	68.2
22	12			11	4.65	43	4.7	59	4.75	64.4	4.6	65.8	4.55	65.8	4.55	65.8	4.55	65.8
23	13					40.4	4.05	55.8	4.1	62	4.1	63.4	4.05	63.4	4.05	63.4	4.05	63.4
24	14					35.6	3.55	52.8	3.6	59.4	3.6	61	3.6	61	3.6	61	3.6	61
25	15					30.6	3.05	48.9	3.1	57	3.1	58.5	3.1	58.5	3.1	58.5	3.1	58.5
26	16					23.7	2.75	45	2.75	54.2	2.8	55.6	2.8	55.6	2.8	55.6	2.8	55.6
27	17					12.9	2.35	40.8	2.4	51.4	2.4	53	2.4	53	2.4	53	2.4	53
28	18							39.2	2.15	48.6	2.2	50.1	2.2	50.1	2.2	50.1	2.2	50.1
29	19							31.4	1.95	45.8	1.95	47.2	1.95	47.2	1.95	47.2	1.95	47.2
30	20							26.4	1.7	42.8	1.7	44.2	1.7	44.2	1.7	44.2	1.7	44.2
31	21							22.6	1.5	40	1.5	43.3	1.5	43.3	1.5	43.3	1.5	43.3
32	22							12.4	1.35	38	1.35	37.8	1.35	37.8	1.35	37.8	1.35	37.8
33	23									31.2	1.2	33.8	1.2	33.8	1.2	33.8	1.2	33.8
34	24									26	1.05	29.2	1.05	29.2	1.05	29.2	1.05	29.2
35	25									19.2	0.9	24	0.9	24	0.9	24	0.9	24
36	26									11	0.8	18	0.8	18	0.8	18	0.8	18
37	27																	
38	28																	
39	29																	
40																		

Visualization data and setting

CONTROL PANEL



Readings:

- % tilting
- Lifted Weight
- Load allowed
- Working Radius
- Boom Extension
- Boom Slope
- Operating Mode
- Attachment used
- Diagnostic

ALARM:

Lights
Green, Amber, Red


MANUAL SELECTION:

- Outrigger
- Translation mode
- N° Rope
- Main Boom
- Inclination attachment

Activation of the emergency functions

External Alarm / Automatic shut off

System description

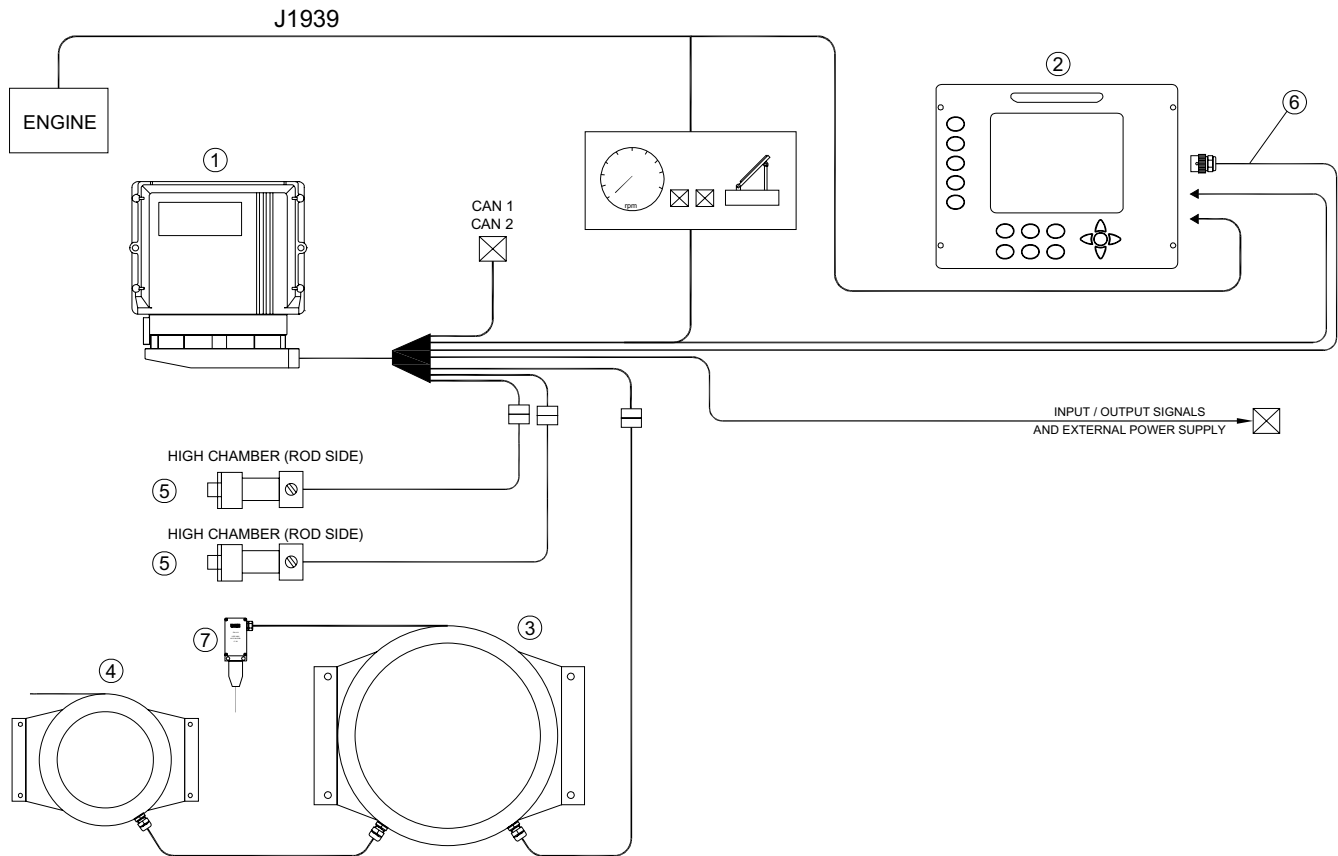

Ref.	Description
1	Main Unit
2	Display unit Black e White
3	Cable reel 32mt
4	Cable reel 11 mt
5	Pressure transducer
6	Can Bus Cable L=10mt
7	Anti twoblock + weight 4 Kg

Components location on the machine

Length/Angle sensor:
On the left side of the boom



Main Unit and Control Panel:
in the cab




A2B






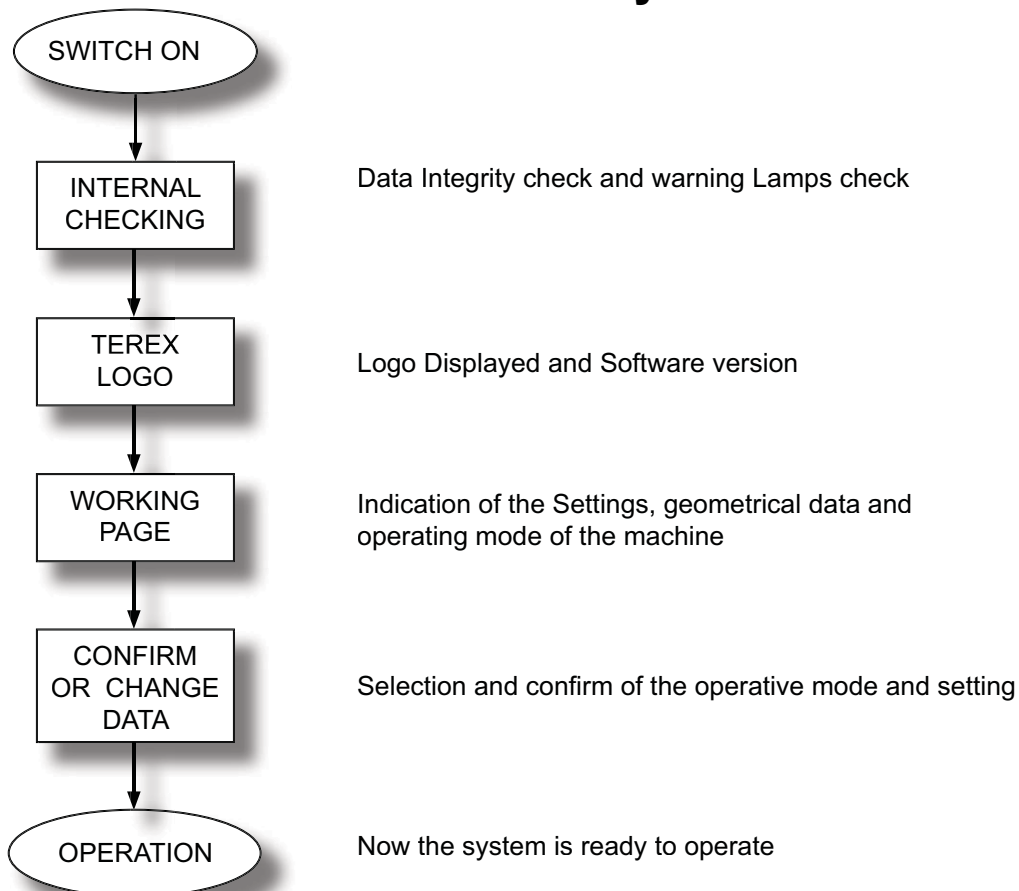


Nr.2 Pressure Transducers:
On the lifting cylinder.
Rod and piston side

System features

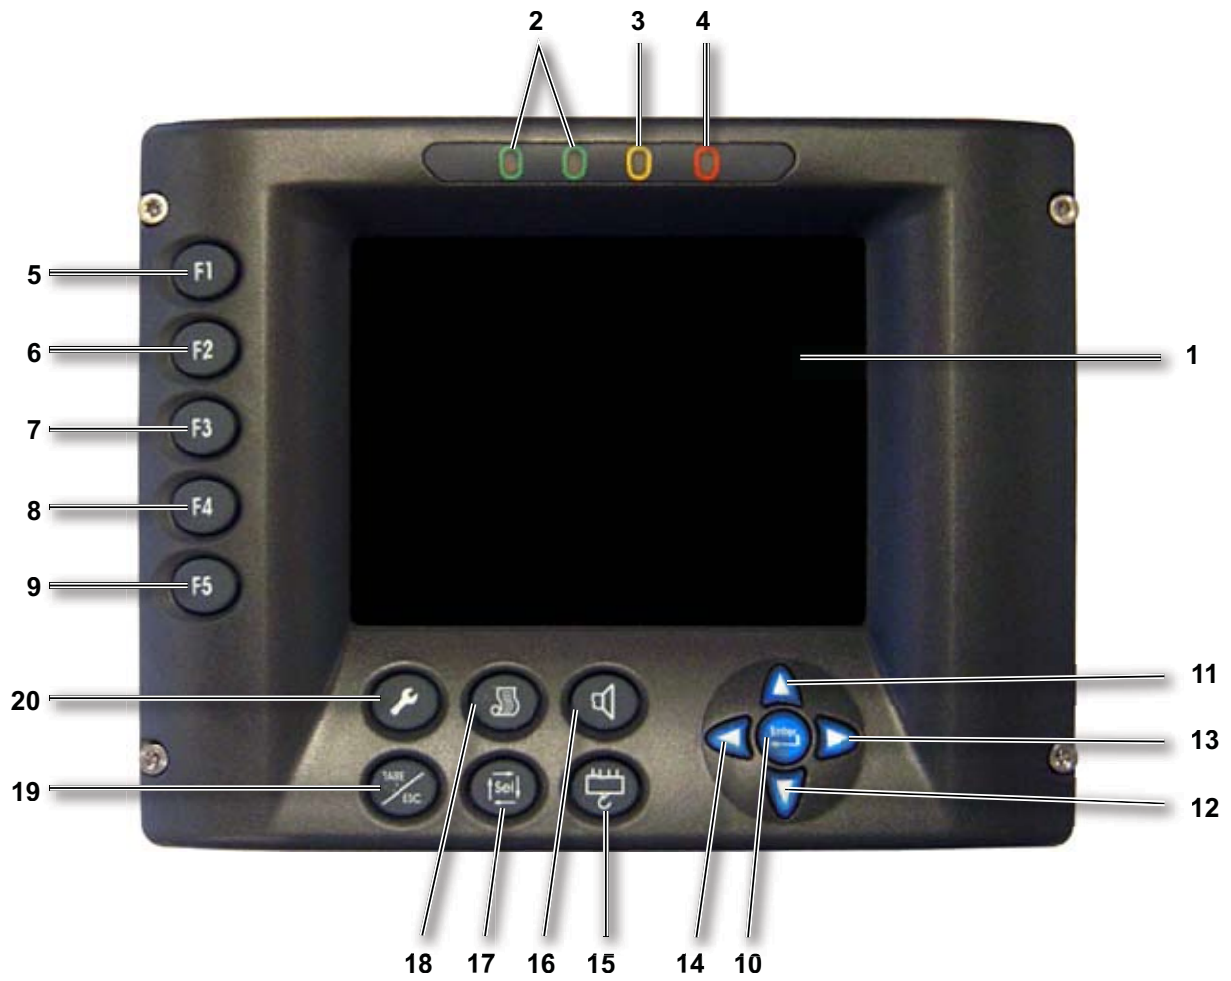


Panel description




Ref.	Icon	Description
1		Working data display
2		Two lights showing the safe work condition
3		Light showing the pre alarm condition
4		Light showing the shut off condition has occurred
5		Function key button depending of the page displayed
6		Function key button depending of the page displayed
7		Function key button depending of the page displayed
8		Function key button depending of the page displayed
9		Function key button depending of the page displayed
10		Confirm an action (operating mode, procedure, limit)
11		Scroll up inside the menu
12		Scroll down inside the menu
13		Increase menu / list (operating mode, number of lines, etc)
14		Decrease menu/list (operating mode, number of lines, etc)
15		Enable/Disable the anti twoblock
16		Disabling buzzer
17		Disable the lowering boom
18		Changing of the pages
19		Back to the main page. It also has a function of deleting the alarms once knowledged
20		Key button in order to let the operator to enter in the calibration's menu. In order to have access and configure the system, the user must scroll up to the operating page. The function is available only if provided with the password (to digit when the Logo is displaying)

Key function


How to disable the buzzer:

Disable: when the audible alarm is active on, by  key you can disable the audible alarm until the new alarm is detected.


Enable: after few seconds that the alarm is switch off the audible alarm will enable automatically.

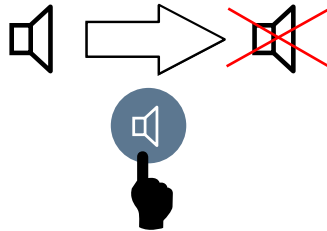

How to change viewing page:

By  pressing, the view page can be changed to indicate the:

- RCL page
- I.S.A.A.C. page

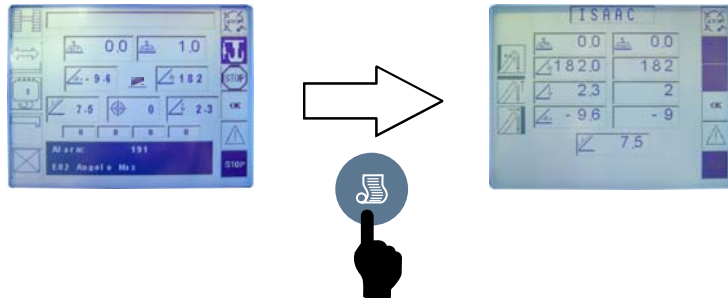


Starting up






When the system get started, the last operating conditions is screened on the display, the latest setting before the machine was turned off. During this procedure, the system performs an auto test and it put itself in shut off condition.

How to select the operating mode



Before starting the lifting operation, the user must check that the operating mode set corresponds to the real machine's configuration (boom, outriggers, counterweight, jib's length and angle, etc) and the number of lines and confirming it pressing  in order to change the operating mode, please proceed as follows


How to select the operating mode

- by  key you must change the outrigger/crawlers geometry;
- by  key you must change the translation mode
- by  key you must change the configuration of the boom or the attachment;
- by  key you must change the configuration of the attachment or the angle of the jib
- by  key confirm the operative mode


When you confirm the code line it indicates the number of the operative mode

Configuration list


Press the button **F1** for change the outrigger configuration, like below:

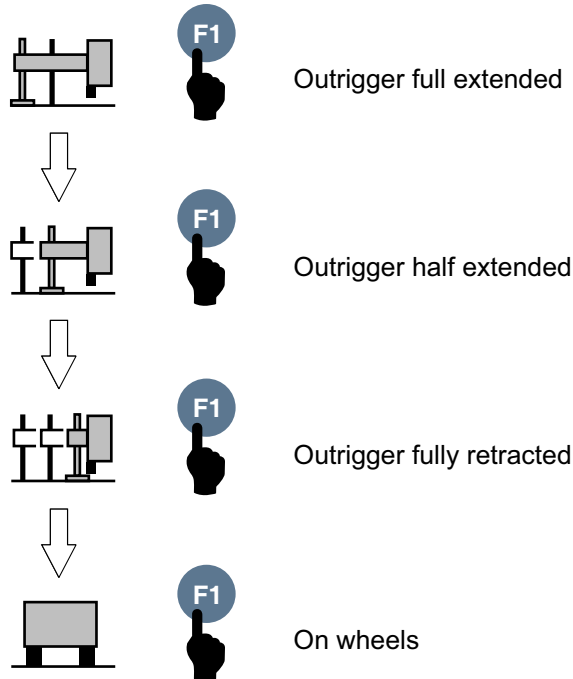


Press the button **F2** for change the translation mode, like below:

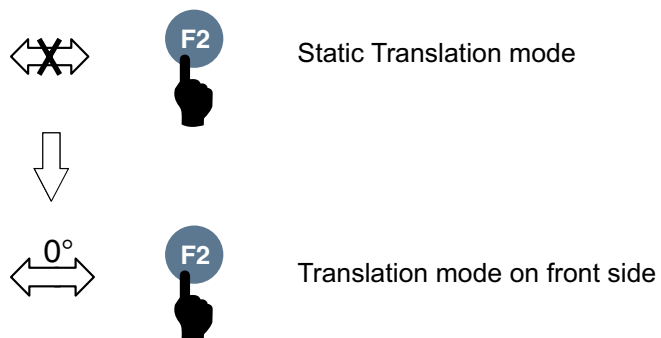

Press the button **F4** for change boom or the attachment

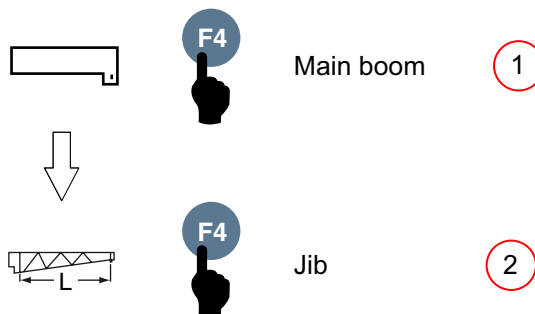


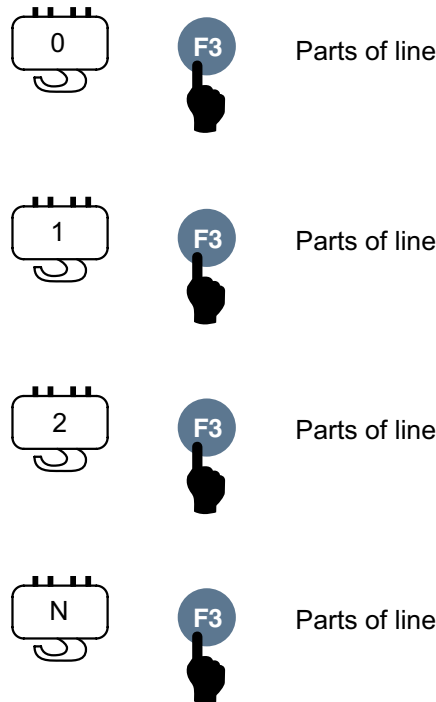
Press the button **F5** for change the configuration of attachment or angle Jib is install at the moment, like below

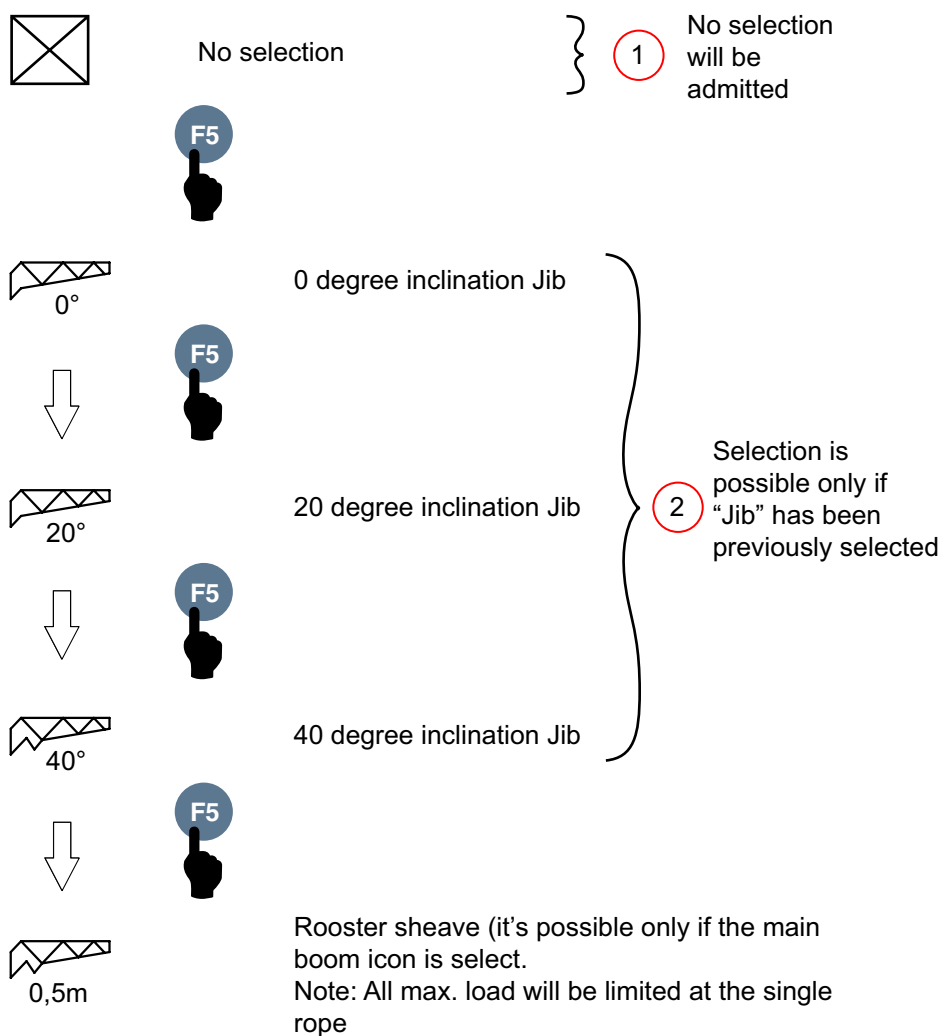

By  key to confirm the parts of line


How to select the parts of line

Press the button  for change the number of rope, like below:




By  key to confirm the parts of line


Disabling the fastener upstroke limit switch




















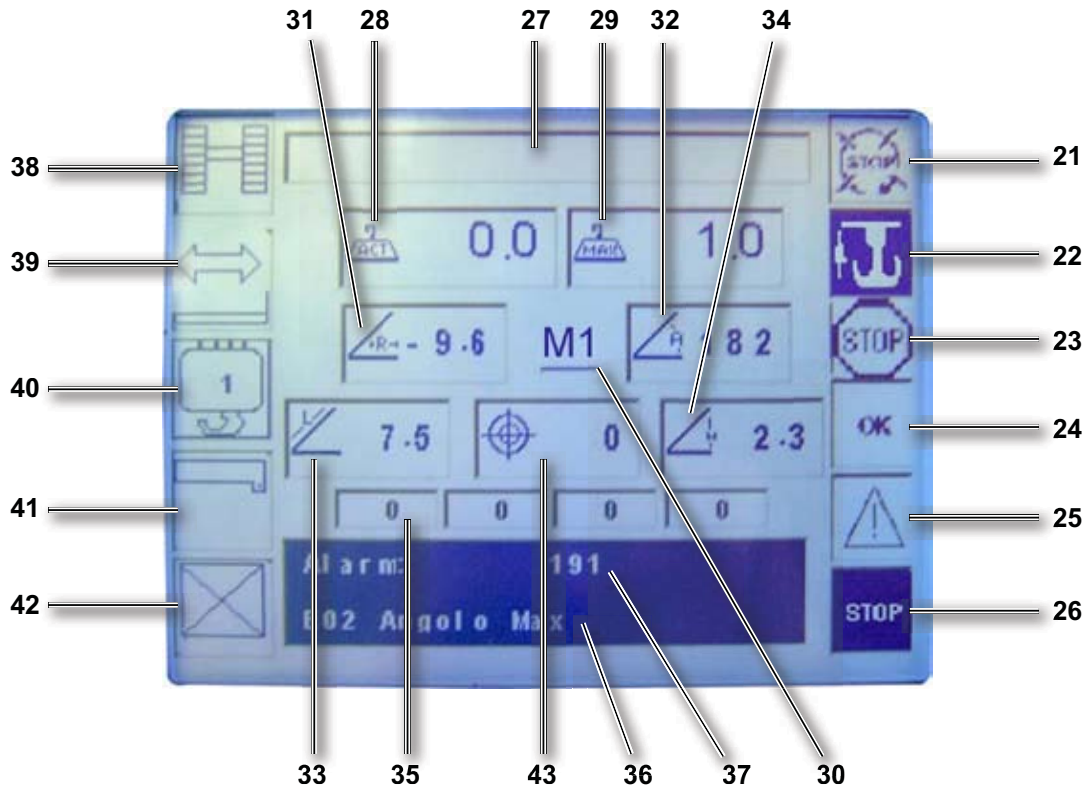


Press and hold button  to disable fastener upstroke limit switch.

Releasing the boom upstroke limit switch lock


In case of boom upstroke limit switch lock, press button  to activate a timer releasing the boom for 10 seconds, thus allowing the operator to tilt it to less than 75°.

Panel visualizations



Ref.	Icon	Description
21		It indicates the RCL by pass key (if activated = black background)
22		It indicates the winch limit switch status (if activated = black background)
23		This icon indicates the Shut Off from Isaac
24		It indicates the machine is in the normal working condition
25		It indicates the machine is in the pre-alarm working condition (90%)
26		It indicates the machine is in the Shut off working condition (100%)
27		Indication of the Load percentage bar
28		Indication of the actual load. Value in Ton
29		Indication of the maximum load in that machine condition.
30		It indicates the Boom's extension MOD 1 or MOD 2 status (M1 = Red Icon ; M2 = Yellow Icon)
31		Indication of the main boom's radius. Value in meters or feet
32		Indication of the main boom's angle. Value in degrees
33		Indication of the main boom's length. Value in meters or feet
34		Indication of the height from the ground. Refer to the "head of the boom". Value in meters or feet
35		It indicates the element extension of the main boom. Value in %
36		Indication of the Alarm code that its present at the moment
37		Indication of the number of operative mode
38		Crawler/outrigger configuration
39		Indication of the translation mode
40		Indication of Parts of Line
41		Configuration of the boom or the attachments
42		Selection about the Jib inclination (if they are present)
43		Visualization of truck inclination (crawler crane only)

How to select the limit

To enter in this page, press the key button , until this one appears



ANGLE



12

12.3

BLOCK VALUE:
Indication of the maximum value set

REAL VALUE:
Indication of the actual value

HEIGHT



4.0

4.7

BLOCK VALUE:
Indication of the maximum value set

REAL VALUE:
Indication of the actual value

RADIUS



7.0

7.7

BLOCK VALUE:
Indication of the maximum value set

REAL VALUE:
Indication of the actual value



How to set the maximum angle

In order to set the maximum angle, set the main boom up to the position and press the **F2** key button.

To delete the set value, press **F2** key button.



How to set the maximum height

In order to set the maximum height, set the main boom to the position and then press the **F3** key button.

To delete the set value, press and hold the **F3** key button.



How to set the maximum radius

In order to set the maximum radius, set the main boom to the position and then press the **F4** key button.

To delete the set value, press and hold the **F4** key button.

Diagnostic

An overall self test diagnostic is provided. When each of the following alarm occurs cut-off relay is de-energized and proper alarm message appears on alphanumeric display.

Troubleshooting


MESSAGE	CAUSE	SOLUTION
ALARM 6 BOOM LENGTH 1 LOW	<ul style="list-style-type: none"> • potentiometer inside broken . • Possible lack of continuity in wires carrying the unwinding • Fault in main unit. 	<ul style="list-style-type: none"> • Check integrity of winder • Check wire continuity • Replace it if broken. • Call assistance
ALARM 7 BOOM LENGTH 1 HIGH	<ul style="list-style-type: none"> • Potentiometer inside broken. • Possible lack of continuity in wires carrying the unwinding • Fault in main unit. 	<ul style="list-style-type: none"> • Check integrity of winder • Check wire continuity • Replace it if broken. • Call assistance
ALARM 11 BOOM LENGTH 2 LOW	<ul style="list-style-type: none"> • Potentiometer inside broken . • Possible lack of continuity in wires carrying the unwinding • Fault in main unit. 	<ul style="list-style-type: none"> • Check integrity of winder • Check wire continuity • Replace it if broken. • Call assistance
ALARM 12 PRESSL LOW	<ul style="list-style-type: none"> • Lower chamber pressure transducer broken • Possible lack of continuity in connection wires • Fault in main unit 	<ul style="list-style-type: none"> • Replace pressure transducer • Check connection wires. • Check insertion of connector on transducer • Call assistance
ALARM 13 PRESSH LOW	<ul style="list-style-type: none"> • Lower chamber pressure transducer broken • Possible lack of continuity in connection wires • Fault in main unit 	<ul style="list-style-type: none"> • Replace pressure transducer • Check connection wires. • Check insertion of connector on transducer • Call assistance
ALARM 14 ANGLE LOW	<ul style="list-style-type: none"> • Angle sensing device broken. Check the inclinometer. • Possible lack of continuity in wires carrying the angle signal • Fault in main unit. 	<ul style="list-style-type: none"> • Check inclinometer • Replace it if broken. • Check connection wires • Call assistance
ALARM 20 FAULT M1/M2	<ul style="list-style-type: none"> • Simultaneously Input M1 and M2 ON • Fault in main unit. 	<ul style="list-style-type: none"> • Check the input status • Deactivate the undesired one • Call assistance
ALARM 21 BOOM LENGTH 2 HIGH	<ul style="list-style-type: none"> • Potentiometer inside broken . • Possible lack of continuity in wires carrying the unwinding • Fault in main unit. 	<ul style="list-style-type: none"> • Check integrity of winder • Check wire continuity • Replace it if broken. • Call assistance

MESSAGE	CAUSE	SOLUTION
ALARM 22 PRESSL HIGH	<ul style="list-style-type: none"> • Upper chamber pressure transducer broken • Possible lack of continuity in connection wires • Fault in main unit 	<ul style="list-style-type: none"> • Replace pressure transducer • Check connection wires. • Check insertion of connector on transducer • Call assistance
ALARM 23 PRESSH HIGH	<ul style="list-style-type: none"> • Upper chamber pressure transducer broken • Possible lack of continuity in connection wires • Fault in main unit 	<ul style="list-style-type: none"> • Replace pressure transducer • Check connection wires. • Check insertion of connector on transducer • Call assistance
ALARM 25 ANGLE HIGH	<ul style="list-style-type: none"> • Angle sensing device broken. • Possible short circuit of connection wires. • Fault in main unit. 	<ul style="list-style-type: none"> • Check inclinometer • Replace it if broken. • Check connection wires • Call assistance
ALARM 56 EPROM KO	<ul style="list-style-type: none"> • Error in EEPROM memory • The contained data are damaged or altered 	<ul style="list-style-type: none"> • Call assistance
ALARM 190 CANBUS HEAD KO	<ul style="list-style-type: none"> • CAN BUS cable broken; • Internal problem 	<ul style="list-style-type: none"> • Check of the CAN BUS cable • Replace unit
ALAM191 ASA CBO TRUCK	<ul style="list-style-type: none"> • Cable broken • ASA broken 	<ul style="list-style-type: none"> • Check of the cable • Replace ASA
ALARM 192 CANBUS ENCODER TURRET ROTATION KO	<ul style="list-style-type: none"> • CAN BUS cable broken; • Internal problem 	<ul style="list-style-type: none"> • Check of the CAN BUS cable • Replace Encoder

Auto-diagnostic

System internal working conditions monitoring

Geometric data and load data

These readings indicate the internal status of the system when troubleshooting a fault condition. Starting from the main working data page press  button: the display will indicate the control page, giving geometric data and main cylinder pressure summary.



The displayed parameters are as follows:


- A1adc: Value (bit) reads directly from the angle sensor
- A1act: Value (degree x 10) of the angle

To return to the main page, press the  button.



The displayed parameters are as follows:

- S1adc: Value (bit) reads directly from the potentiometer of the Length 1
- S1act: Value (meter x 100) of the length

To return to the main page, press the  button.




The displayed parameters are as follows:

- S2adc: Value (bit) reads directly from the potentiometer of the Length 2
- S2act: Value (meter x 100) of the length

To return to the main page, press the  button.

Hydraulic pressure data

By pressing the  the display shows the individual hydraulic pressures summary:



The displayed parameters are as follows:


- PLadc: Value (bit) reads directly from the pressure sensor
- PLact: Value of the pressure on the bottom side




The displayed parameters are as follows:

- PHadc: Value (bit) reads directly from the pressure sensor
- PHact: Value of the pressure on the rod side


Sensor digital inputs

Pressing once again the  button the display will indicate the digital input page;


Where the asterisk is present means, that digital input is activated otherwise if is not present the asterisk the digital input is off

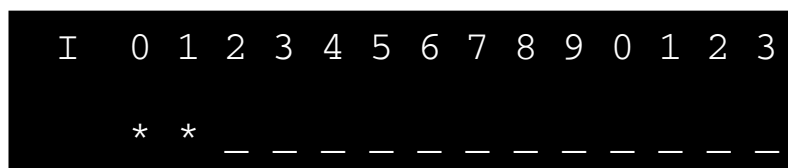


Sensor digital outputs


Pressing once again the  button the display will indicate the digital output page;

Where the asterisk is present means, that digital output is activated otherwise if is not present the asterisk the digital output is off

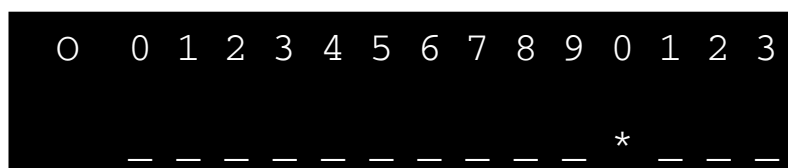

Diagnostic external unit


By pressing the  the display indicates the summary of the remote units

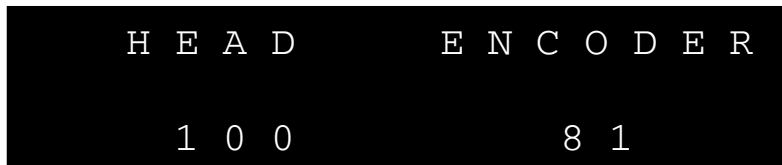


The displayed parameters are as follows:


- HEAD: counter control about Head unit: if this counter moves means that the unit is activate
- ENCODER: counter control about Encoder: if this counter moves means that the encoder is activate


Setting display contrast


Press the button  is possible to increase the contrast of the display

Press the button  is possible to decrease the contrast of the display



Setting languages change

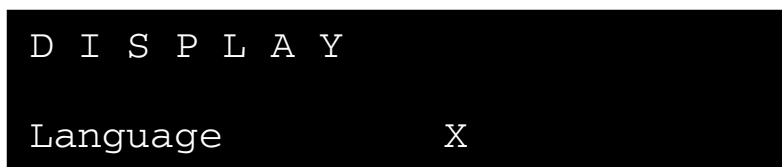
After the confirm the operative mode by  button is possible to entry inside the menu called "Language" where is possible to select the right language.





Press the button  is possible to change the value of the language.



Press the button   is possible to change the language.

Press the button  is possible to confirm the language.




Press the button  is possible to exit from this menu and return on the Main Page.

Disabling the rated capacity limiter

The machine is equipped with a device for disabling the rated capacity limiter.

To disable the limiter,
on upperstructure:

- turn clockwise and release key **44** on electric box. This operation involves the led on button **45** inside the cabin to switch on;

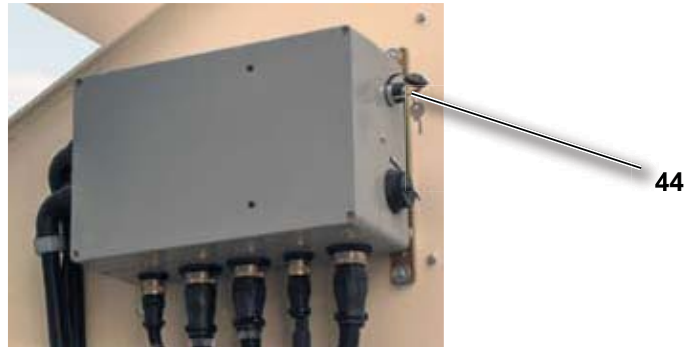

in the cabin:

- press and hold button **45** to disable the rated capacity limiter.



Release button **45** to re-enable limiter.

When the rated capacity limiter is disabled a visible and audible alarm is activated outside the cab. The external alarm device is located at the fixing point of luffing cylinder to boom.



Switch off and then back on the crane control board to reset the system and the limiter will be operating normally again.



WARNINGS

It is forbidden to use this device to lift loads exceeding the capacity allowed by the manufacturer.

The device shall be used only in case of system failure or malfunction.

The device can be used only by authorised and qualified personnel.

The key 44 should never be left on the machine; authorised persons in charge of its use should keep it in a safe place.

Warnings

- The Rated Capacity Limiter is an electronic device with the aim to aid the operator in the current use of the machine, warning him by means of visual and audible alarms when approaching dangerous conditions.
- However this device can't replace the operator's good experience in the safe use of the machine.
- The responsibility of the operations in safe conditions of the machine is the operator concern as well as the accomplishment of all prescribed safety rules
- The Operator must be able to detect if the data given by the RCL is correct and correspond to actual working conditions. He must be able to utilize the data given by the RCL in order to operate in safe conditions in any time.
- The RCL is an electronic device including several sensing components, therefore it can be subject to failures or defects. The operator must recognize these events and he must take action (to proceed to repair if possible or to call Assistance).
- Before starting the operation with the machine, the user must fully read and understand this manual and follow the instructions at any time.
- The RCL is supplied with a key for shut-down function by-passing.
- In normal working operations, this key must be positioned not to by-pass shut-down.
- It's prohibited to use the key to lift loads exceeding the loads values allowed by the Manufacturer.
- The key can be used only when an emergency/malfunctioning occurs or a situation justifying its use.
- Only Authorized Personnel is allowed to the use of the key; they are also responsible for it.
- The RCL has a powerful FAIL-SAFE auto diagnosis program suitable to verify its good operations and the one of its transducers. In case a trouble has been detected, the RCL puts itself in a safe state by stopping the manoeuvres (please see the AUTODIAGNOSTIC chapter).
- In spite of this, the Operator, before starting the operation with the machine, must take care that the RCL is working correctly. To do this, he must verify the validity of the displayed values by doing some tests. He must verify that there are not messages or alarm indications; he must verify the correct operation of the manoeuvre stopping functions.
- The operator is responsible for the correct setting of the machine load table and therefore for the right RCL set. When switching-on the machine the last selected Table is kept valid, to allow Operator check.

- About this, please follow the instructions given in the OPERATING MODE SELECTION chapter. An incorrect setting of the tables, can cause an incorrect RCL operation and therefore can provoke a dangerous situation for the machine.

Generally, it's compulsory to follow the Manufacturer instructions and procedures at any time.